



Installing Your Battery Tracker

1. Place your unit anywhere in/on equipment.

This unit can be placed anywhere; however, it is recommended that it is placed somewhere that is not heavily obstructed. This could degrade tracking performance. The device is rated to 60°C/140°F, so avoid placing it in the engine compartment or other hot locations.

You can also use the holes on the sides to mount the unit on the surface.



2. Contact support.

Once the unit is properly placed and out in the open, please contact support at (818) 659-2031. Support will update the device appropriately to your preferred updating speeds.

By default, while moving, the unit records the location every 5 minutes and sends it every 30 minutes, which means you will get 6 updates every thirty minutes. When not in motion, it sends updates every 4 hours. This can be customized based on your needs.

3. Replace the batteries as needed.

Open the device up to install new batteries. The recommended batteries for this unit are Energizer Ultimate Lithium batteries (AAA). Once the batteries are inserted, close the device back up and screw it shut. The unit has an extremely long battery life of up to 10 years.

